

# SPARE PARTS LIST

PAGE 1

## MODEL: BJV180

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	188207-9	HANDLE SET	1	SET
002	266048-4	TAPPING SCREW 4X40	1	PC.
003	266091-3	TAPPING SCREW 4X50	1	PC.
004	265995-6	TAPPING SCREW 4X18	5	PC.
005	442138-9	PACKING	1	PC.
006	214031-5	PLANE BEARING 4	1	PC.
007	232207-2	LEAF SPRING	1	PC.
008	256117-9	PIN 4	1	PC.
009	911111-5	PAN HEAD SCREW M4X10	2	PC.
010	911111-5	PAN HEAD SCREW M4X10	2	PC.
011	345240-6	LINEAR GUIDE	1	PC.
012	345240-6	LINEAR GUIDE	1	PC.
013	153338-3	GEAR HOUSING COVER COMPLETE	1	PC.
014	631744-7	LIGHT CIRCUIT	1	PC.
015	689070-8	HEAT SINK	1	PC.
016	911006-2	PAN HEAD SCREW M3X8	1	PC.
017	232152-1	LEAF SPRING	1	PC.
018	419613-0	LOCK OFF BUTTON	1	PC.
019	650584-4	SWITCH C3LA-2A-PLSR	1	PC.
020	233118-4	COMPRESSION SPRING 4	1	PC.
021	419754-2	SWITCH LEVER	1	PC.
022	324233-6	SAFETY WIRE	1	PC.
023	266034-5	TAPPING SCREW CT 4X16	4	PC.
024	643812-4	TERMINAL	1	PC.
025	188207-9	HANDLE SET	1	SET
026	268090-1	PIN 4	1	PC.
027	961017-7	STOP RING E-3	1	PC.
028	310134-4	SLIDER	1	PC.
029	231659-4	TORSION SPRING 6	1	PC.
030	419820-5	TOOL OPENER	1	PC.
031	265026-1	+ PAN HEAD SCREW #REF!	1	PC.
032	310135-2	PUSH PIN	1	PC.
033	421817-2	DUST COVER	1	PC.
034	962068-3	RETAINING RING R-18	1	PC.
035	165326-8	ROD	1	PC.
036	231660-9	TORSION SPRING 15	1	PC.
037	310136-0	BLADE HOLDER	1	PC.
038	188208-7	MOTOR HOUSING SET	1	PC.
039	265995-6	TAPPING SCREW 4X18	4	PC.
040	862966-0	BJV180 NAME PLATE	1	PC.
041	638504-8	ENDBELL COMPLETE	1	PC.
042	638373-7	YOKE UNIT	1	PC.
043	619206-5	ARMATURE	1	PC.
044	961004-6	RETAINING RING S-8	1	PC.
045	212014-9	NEEDLE BEARING 407	1	PC.
046	265353-6	HEX. SOCKET HEAD BOLT M4X12	2	PC.
047	153336-7	CRANK COMPLETE	1	PC.
048	313108-4	BALANCE PLATE	1	PC.
049	158168-7	GEAR COMPLETE	1	PC.
050	345235-9	PUSH PLATE	1	PC.
051	253877-4	FLAT WASHER 8	1	PC.
052	266050-7	TAPPING SCREW 4X30	4	PC.
053	961018-5	STOP RING E-5	1	PC.
054	417839-8	SEAL PLATE	1	PC.
055	286032-3	CAP 5	1	PC.
056	233139-6	COMPRESSION SPRING 3	1	PC.
057	272244-4	LEVER 17	1	PC.
058	268063-4	PIN 4	1	PC.
059	158169-5	GEAR HOUSING COMPLETE	1	PC.
060	252171-1	SQUARE NUT M5-8	1	PC.

# SPARE PARTS LIST

**MODEL:**

---

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
061	421816-4	DUST SEAL	1	PC.
062	153334-1	RETAINER COMPLETE	1	PC.
063	188208-7	MOTOR HOUSING SET	1	PC.
064	195018-5	CARBON BRUSH CB-430	1	PC.
065	643807-7	BRUSH HOLDER CAP	2	PC.
066	232208-0	LEAF SPRING	1	PC.
067	922226-3	HEX. SOCKET HEAD BOLT M5X18	1	PC.
068	345237-5	CRANK PLATE	1	PC.
069	317565-8	BASE	1	PC.
070	912107-9	COUNTERSUNK HEAD SCREW M4X8	4	PC.
071	345238-3	BASE PLATE	1	PC.

---