


# Parts List For Air Nailer AF504Z

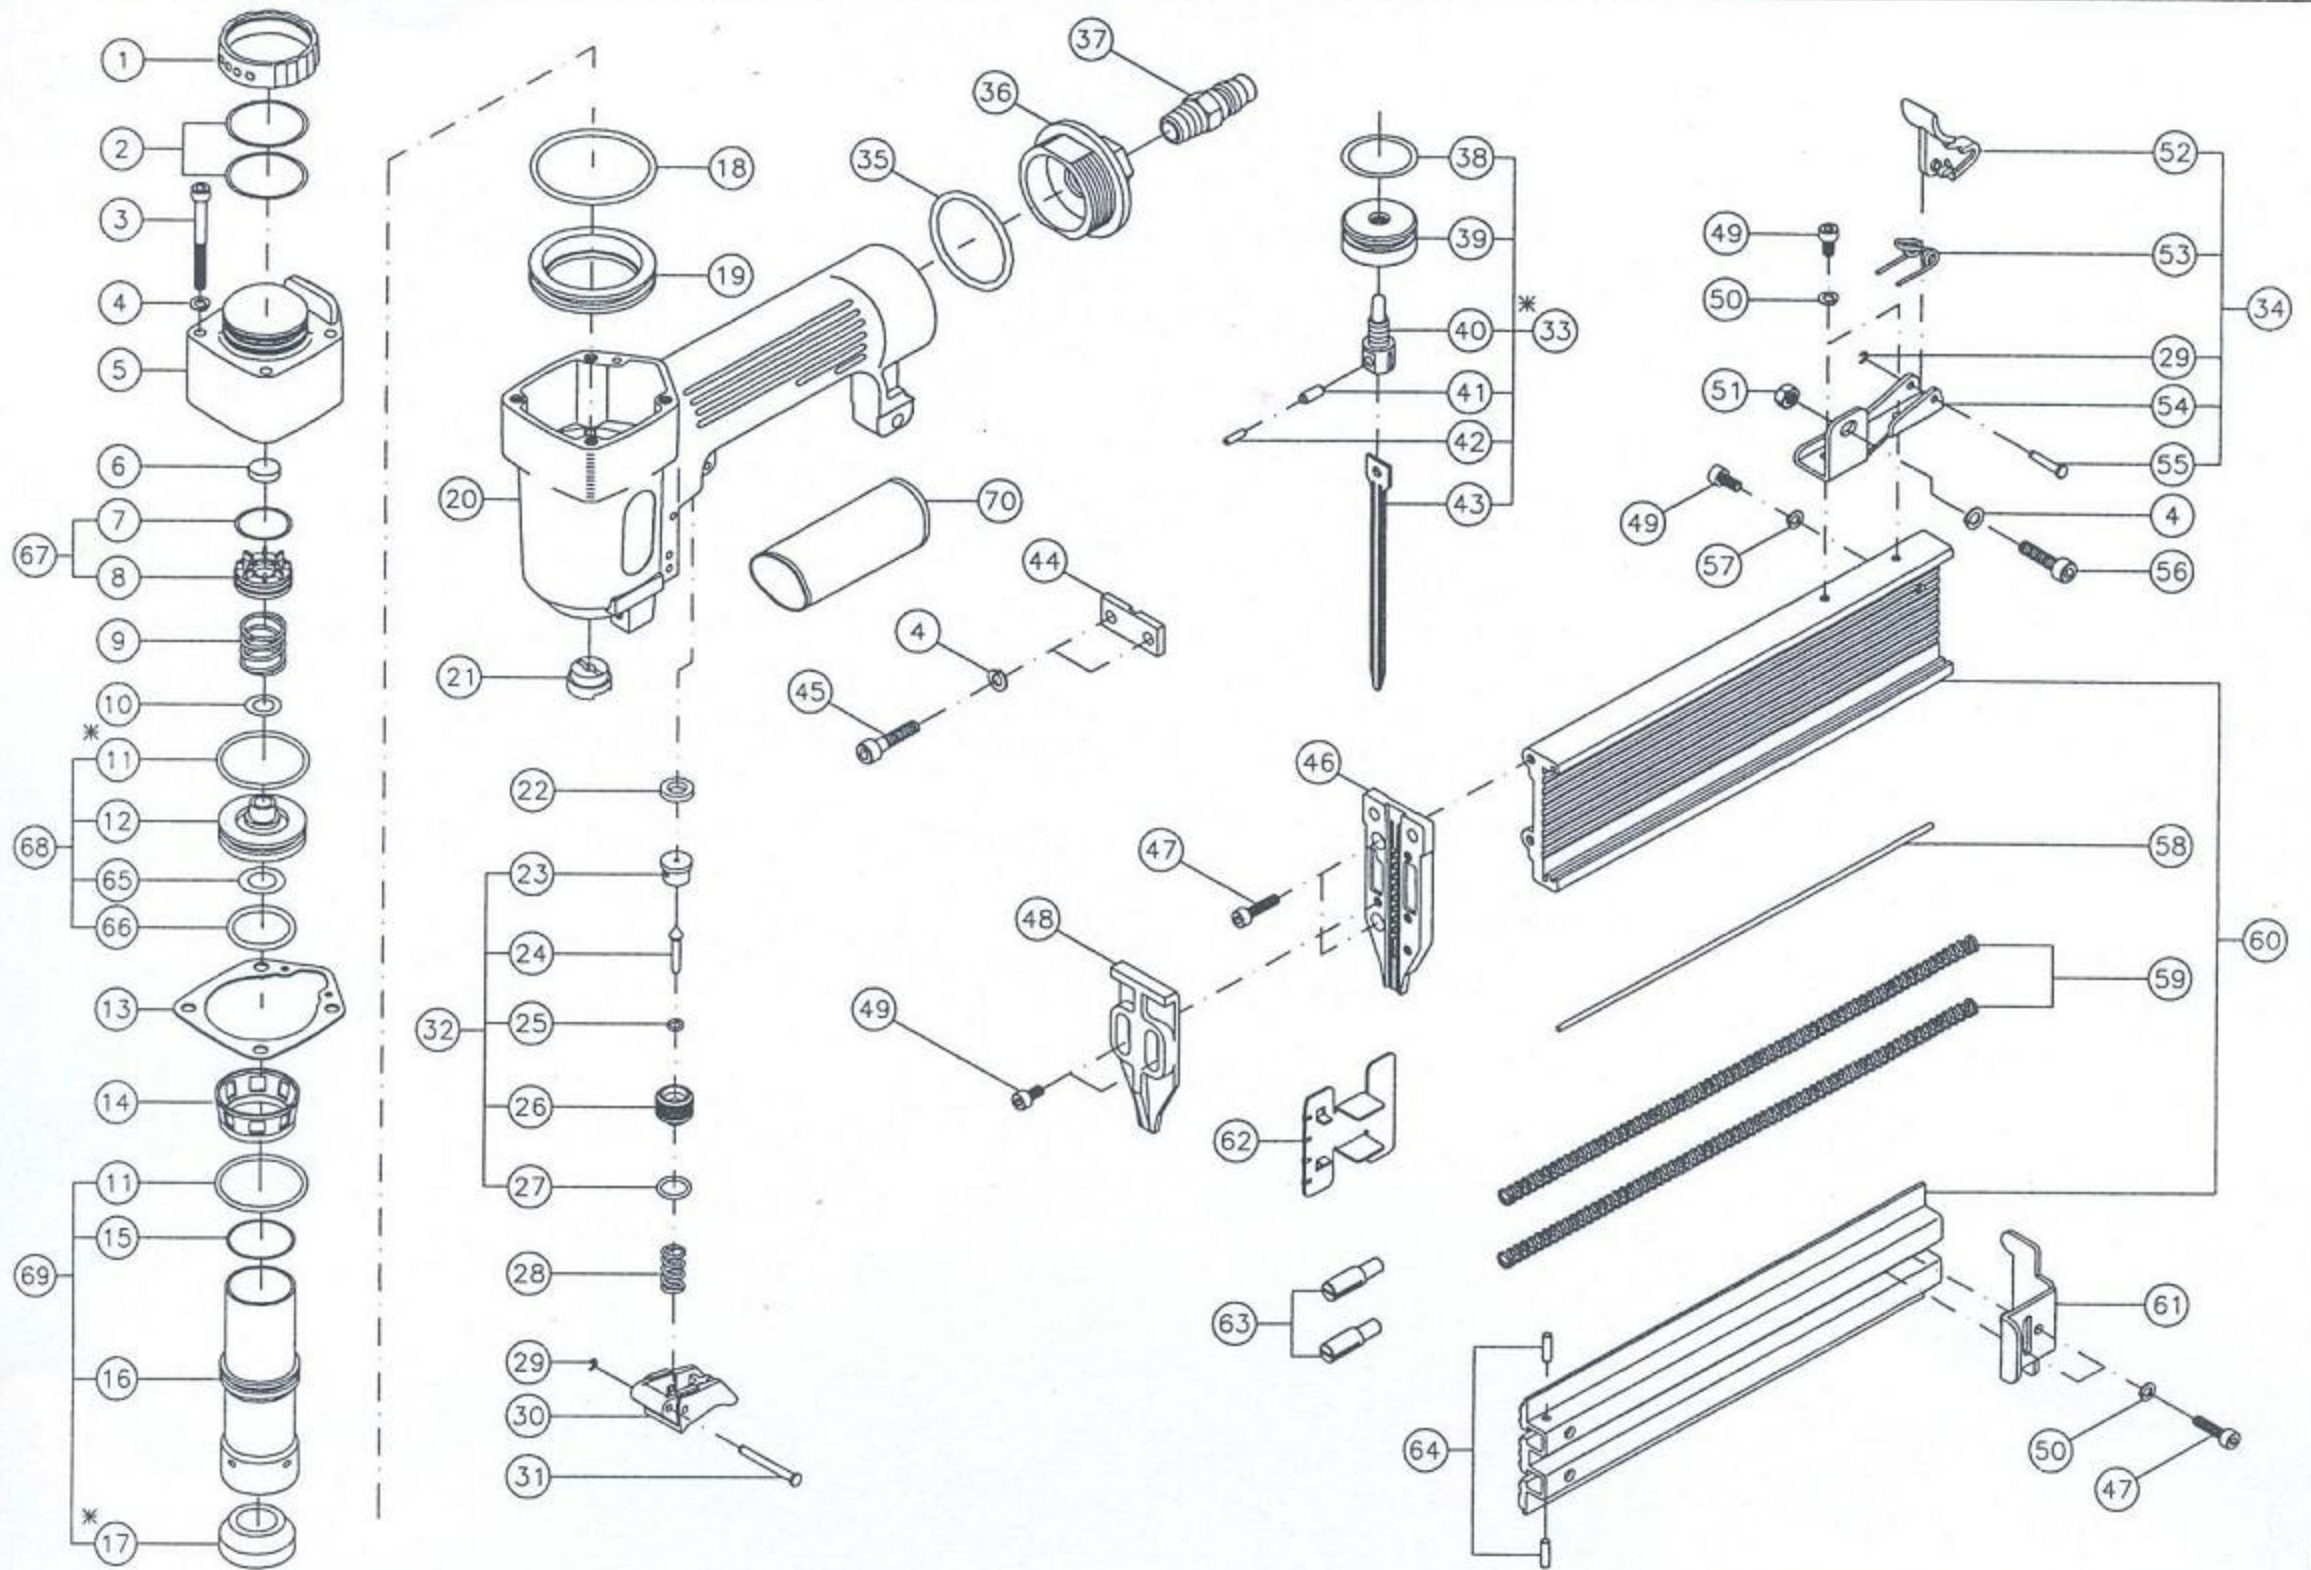

ITEM NO.	PART NO.	DESCRIPTION	QTY	ITEM NO.	PART NO.	DESCRIPTION	QTY
1	A0304-0301	EXHAUST VALVE COLLAR	1	36	A0306-0231	TAIL COVER	1
2	A0200-1261	O-RING 1.301"*0.07"	2	37	A0307-0001	AIR PLUG	1
3	A0000-0341	SCREW M5*50	4	38	A0200-0721	O-RING 22.9*2.7	1
4	A0005-0031	WASHER #5*1.1t	7	39	A0602-0172	PISTON HEAD	1
5	A0301-0151	CYLINDER CAP	1	40	A0601-0011	DRIVER BLADE PIN	1
6	A0311-0121	SEAL, AIR	1	41	A0011-0051	OUTER SPRING PIN 4*10	1
7	A0200-0241	O-RING 22*1.5	1	42	A0011-0061	INNER SPRING PIN 2.5*10	1
8	A0314-0141	EXHAUST VALVE SITE	1	43	A0600-1731	DRIVER BLADE	1
9	A0100-0221	SPRING	1	44	A0800-0021	SPACER	1
10	A0200-0231	O-RING 9.8*2.4	1	45	A0000-0101	SCREW M5*22	2
11	A0200-0071	O-RING 31*2.5	2	46	A0801-0511	DRIVER GUIDE	1
12	A0308-0241	FIRING VALVE PISTON	1	47	A0000-0021	SCREW M4*16	4
13	A0205-0111	GASKET	1	48	A0801-1331	DRIVER GUIDE COVER	1
14	A0305-0071	COLLAR	1	49	A0000-0011	SCREW M4*8	5
15	A0200-0301	O-RING 28*1.2	1	50	A0005-0051	WASHER #4*0.9t	4
16	A0303-0141	CYLINDER	1	51	A0004-0001	HEX. NUT M5	1
17	A0309-0011	BUMPER	1	52	A0709-0081	CLICK LEVER	1
18	A0200-0911	O-RING 39.4*3.1	1	53	A0103-0061	SPRING	1
19	A0800-0381	SPACER	1	54	A0706-0201	SPRING HOLDER	1
20	A0401-1161	BODY	1	55	A0006-0041	STEP PIN $\phi$ 5*16.7	1
21	A0310-0241	NOZZLE	1	56	A0000-0091	SCREW M5*20	1
22	A0505-0041	SEAL, AIR	1	57	A0005-0071	WASHER #4*1.2t	1
23	A0503-0211	TRIGGER VALVE HEAD	1	58	A0708-0031	STEEL BAR	1
24	A0504-0001	TRIGGER VALVE STEM	1	59	A0100-0031	COMPRESSION SPRING	2
25	A0200-0321	O-RING 3.8*1.5	1	60	B0700-5731	MAGAZINE SET	1
26	A0503-0041	TRIGGER VALVE GUIDE	1	61	A0716-0171	END STOPPER	1
27	A0200-0331	O-RING 9.8*1.9	1	62	A0707-0451	PUSHER	1
28	A0100-0021	COMPRESSION SPRING	1	63	A0706-0691	SPRING HOLDER	2
29	A0005-0041	E-RING $\psi$ 2.5	2	64	A0011-0231	SPRING PIN 3*12	2
30	A0500-0191	TRIGGER	1	65	A0200-0251	O-RING 13*3	1
31	A0006-0271	STEP PIN $\phi$ 2.9*29	1	66	A0200-0081	O-RING 25*3.5	1
32	K0500-0291	TRIGGER VALVE SET	1	67	K0300-0671	EXHAUST VALVE ASS'Y	1
33	K0600-3271	PISTON SET	1	68	K0300-0621	HEAD VALVE PISTON SET	1
34	B0700-0761	CLICK LEVER SET	1	69	K0300-0261	CYLINDER SET	1
35	A0200-0131	O-RING 35*3.5	1	70	A0204-0081	HANDLE GRIP	1

\* REPAIR KIT

01/15/2007/D